


MacRury 140 and 138 Classroom A/V Equipment Instructions


PLEASE POWER OFF EQUIPMENT AFTER USE!

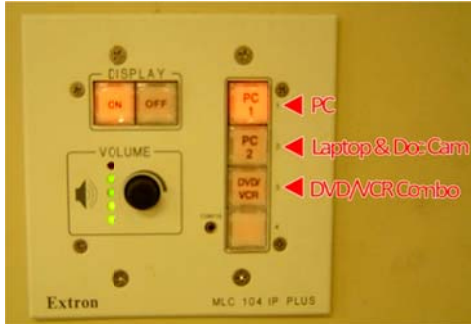

[Control Panel]


- Press **"ON"** button under **"DISPLAY"** to turn on the projection unit.
- Press **"OFF"**, to turn off the projection unit.
- **"VOLUME"** controls every input's volume level.

[To use the classroom PC]

- Turn the PC on by locating the power button .
- Select **"PC 1"** on the control panel.
- Login user name is **mprojector**
- Login password is **mprojector**



[Document Camera]


- Power on the document camera by locating the power button on the unit. .
- Select **"Doc Cam"** or **"PC2"** on the control panel.

Using Transparencies?

- Power on the light tablet (pictured left) by locating the switch on the tablet.


[Laptop Connection]

* NOTE: The Laptop connection is shared with the document camera. Please wait to power on your laptop.

- Power on the document camera by locating the power button on the unit. .
- Select **"Doc Cam"** or **"PC2"** on the control panel.
- Locate the loose VGA and audio cables. Connect both to your laptop.
- On the document camera, locate and press the **"LAPTOP"** or **"INT/EXT"** button.
- Power on your laptop.



[DVD/VCR]

- Locate the DVD and VHS players. These units are stored above the PC in the cabinet.
- Power on the unit you wish to use by locating the power button .
- Adjacent to the DVD and VHS players is a switch. Press the button on the switch to which player you wish to view.
- Locate and Press the **"DVD/VHS"** button on the control panel.
- Adjust the volume control knob on the control panel for audio.

[Additional Information]

Switching between Inputs

- Select the input you wish to display.
- For example, if you wish to display the PC, press **"PC1"** on the control panel. You also have a transparency you would like students to view. Ensure the document camera is powered on, then press the **"Doc Cam"** button on the control panel. Now you wish to see the PC once again, press the **"PC1"** button on the control panel once again. A student now wishes to show a DVD. Ensure the DVD player is powered on and the switch next to the DVD player is selected to DVD. Press the **"DVD/VCR"** button on the control panel.

Blanking the Projector

- In order to "blank" the projector so students do not see what is being displayed, choose an alternative input on the control panel. This will cause the projection unit to display a blue screen.

TECHNOLOGY SERVICES

For assistance call 271-7144 or email
nhtihelpdesk@ccsnh.edu

